PlanSign Paperflex with New Front

Dismounting / Opening the Front Panel in PlanSign Paperflex A5, A6, A4 Portrait, A4 Landscape, A3 Portrait

1.
PlanSign Paperflex mounted with the new front lock.

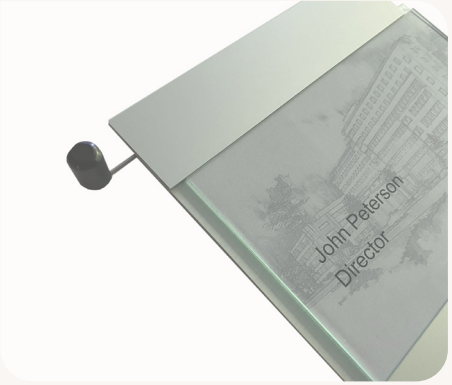

2.
Use a flat object to lift the lock, e.g., a ruler or a folding rule.

3.
When the sign is locked, the latch is down.

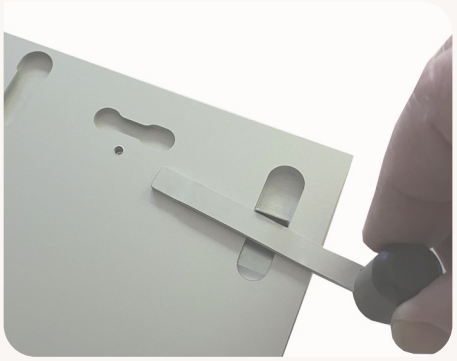

4.
Activate the lock and push upward to open.

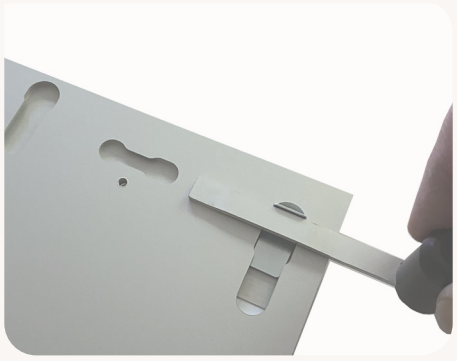

5.
The front panel is now free, allowing the print to be replaced.

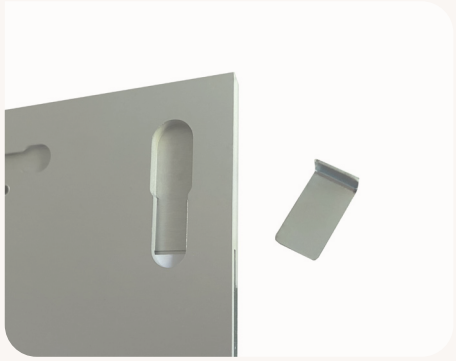

6.
The sign and lock can be separated if needed.

dansign