Change the name of Paperflex

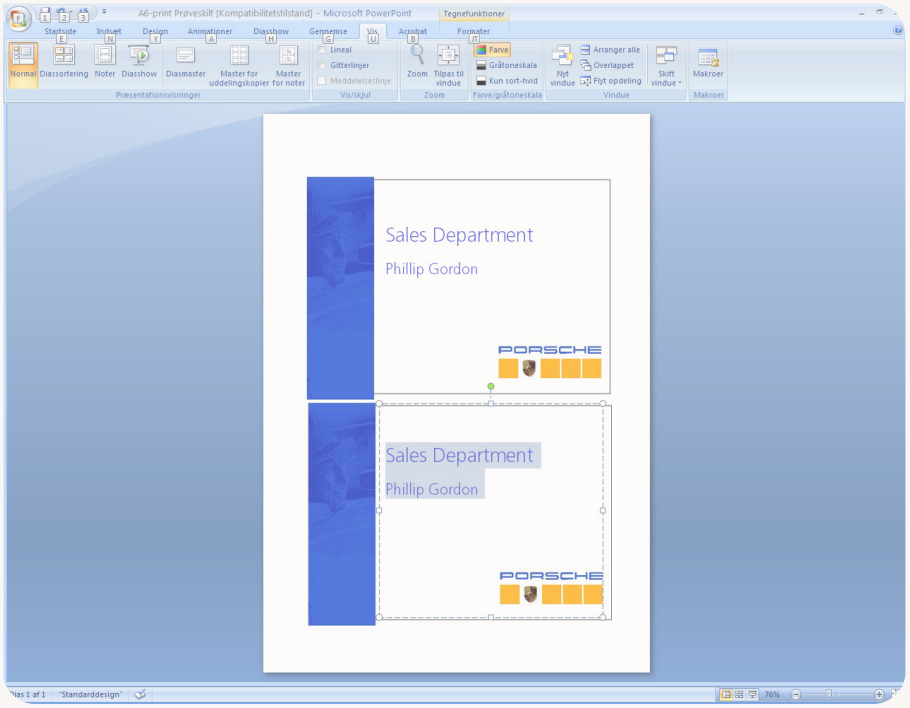

1.
Open the Paperflex template.

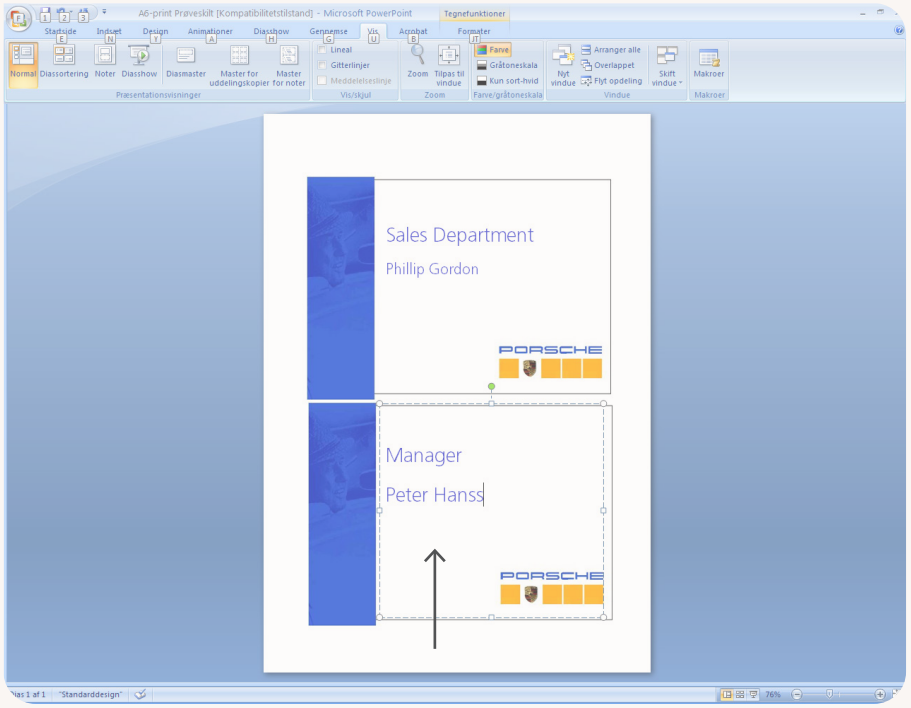

2.
Change the name and, if applicable, the title, then print it.

Change the name of Paperflex

3.
Cut or trim out the template.

4.
Slide the front panel to the side.

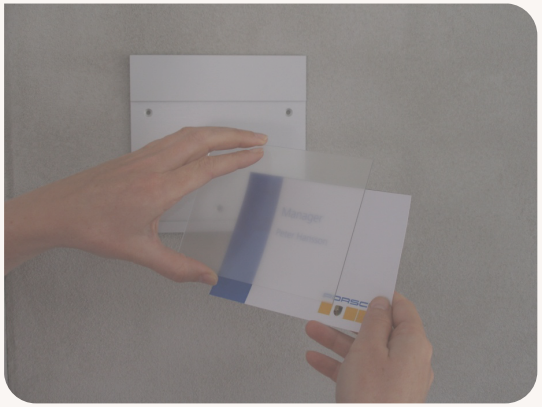

5.
Insert the new name into
the sign.

6.
Slide the front panel back into the sign
along with the printout.

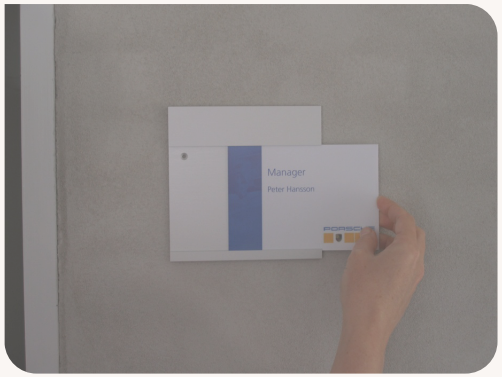

7.
Tighten the screw on the back
to secure the front panel.